

1 Safety instructions

These instructions apply to the Universal Wireless Foldable Keyboard for wireless input on compatible devices. Read these safety instructions carefully before using the product. Keep this manual for future reference.

1.1 General Safety

⚠ WARNING

- Risk of injury due to improper use**
 - Use the product only for its intended purpose and in dry indoor environments.
 - Do not open, disassemble or modify the product.
 - Do not use the product if it is damaged.
 - Protect the product from moisture, high temperatures, direct sunlight, open flames and strong impacts.
 - Keep the product and its packaging materials out of the reach of children. This product is not a toy.
 - Observe the applicable regulations when using the product in aircraft, hospitals or other areas where wireless communication is restricted.

1.2 Battery and Charging Safety

⚠ WARNING

- Hazard due to improper handling of the battery**
 - This product contains a permanently integrated lithium battery.
 - Do not open, damage or remove the battery.
 - Do not expose the battery to high temperatures or fire.
 - Avoid short circuits and contact with conductive objects.

CAUTION

- Risk of property damage**
 - Charge the product only via the USB-C charging port using a suitable USB power source.
 - Do not use damaged charging cables or power adapters.
 - Do not continue using the product if the battery is damaged, leaking, overheating or deformed.
 - Avoid deep discharge by charging the product regularly.
 - Do not continue using the product if the battery becomes unusually hot, deformed, or appears damaged.

1.3 Information for Users with Medical Implants

⚠ WARNING

- Magnets may interfere with medical implants**
 - This product contains magnets that may interfere with the operation of pacemakers, implantable cardioverter defibrillators (ICDs) and other medical implants.
 - Keep a sufficient distance between the product and any medical implant. If in doubt, consult the manufacturer of the implant or your physician before using the product.

1 Sicherheitshinweise

Diese Anleitung gilt für die Universal Wireless Tastatur Foldable zur kabellosen Eingabe auf kompatiblen Endgeräten. Lies diese Sicherheitshinweise sorgfältig durch, bevor du das Produkt verwendest. Bewahre die Anleitung für die spätere Verwendung auf.

1.1 Allgemeine Sicherheit

⚠ WARNUNG

- Gefahr von Verletzungen durch unsachgemäße Verwendung**
 - Verwende das Produkt ausschließlich bestimmungsgemäß und nur in trockenen Innenräumen.
 - Öffne, zerlege oder modifiziere das Produkt nicht.
 - Verwende das Produkt nicht, wenn es beschädigt ist.
 - Schütze das Produkt vor Feuchtigkeit, hohen Temperaturen, direkter Sonneneinstrahlung, offenem Feuer und starken Stößen.
 - Halte das Produkt und das Verpackungsmaterial von Kindern fern. Das Produkt ist kein Spielzeug.
 - Beachte in Flugzeugen, Krankenhäusern und anderen Bereichen mit eingeschränktem Funkbetrieb die geltenden Vorschriften.

1.2 Sicherheit für Akku und Laden

⚠ WARNUNG

- Gefahr durch unsachgemäßen Umgang mit dem Akku**
 - Das Produkt enthält einen fest verbauten Lithium-Akku.
 - Öffne, beschädige oder entferne den Akku nicht.
 - Setze den Akku keinen hohen Temperaturen oder Feuer aus.
 - Vermeide Kurzschlüsse und den Kontakt mit leitfähigen Gegenständen.

ACHTUNG

- Gefahr von Sachschäden**
 - Lade das Produkt ausschließlich über den USB-C-Anschluss mit einer geeigneten USB-Stromquelle.
 - Verwende keine beschädigten Ladekabel oder Netzteile.
 - Verwende das Produkt nicht weiter, wenn der Akku beschädigt ist, ausläuft, sich ungewöhnlich erhitzt oder verformt.

1.3 Hinweise für Träger medizinischer Implantate

⚠ WARNUNG

- Beeinträchtigung medizinischer Implantate durch Magnete**
 - Das Produkt enthält Magnete, die die Funktion von Herzschrittmachern, implantierten Defibrillatoren und anderen medizinischen Implantaten beeinträchtigen können.
 - Halte ausreichend Abstand zwischen dem Produkt und medizinischen Implantaten und konsultiere bei Unsicherheiten den Hersteller des Implantats oder einen Arzt.

2 Technical Specifications


Model: 541917 / 541918 / 541919 / 541920
Bluetooth-Version: 5.0
Frequenzbereich: 2402–2480 MHz
Maximum RF Output Power: 3.22 dBm
Wireless Range: Up to 10 m
Number of Paired Devices: Up to 3
Charging Port: USB-C
Battery: Li-Polymer, 3.7 V, 500 mAh
Operating Voltage: 3.3–4.2 V

Charging Time: 1–2 hours
Operating Time: Up to 50 hours
Standby Time: Up to 2 months

Supported Operating Systems:

- Android: Version 3.0 or later
- iPadOS: Version 13.4 or later
- Windows
- macOS
- iOS

3 Product Overview

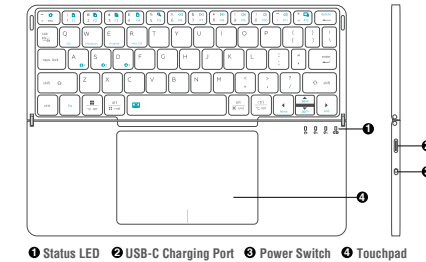

4 Getting Started

- Charge the Keyboard Before First Use**
 - Connect the keyboard to a suitable USB power source using the supplied USB-C cable.
 - Fully charge the battery before using the keyboard for the first time.

Power On the Keyboard

- Slide the power switch to ON.
- The status LED lights up briefly.

Pair a Bluetooth Device

- Enable Bluetooth on your device.
- Press and hold **Fn + A**, **Fn + S** or **Fn + D** for approximately 3 seconds until the Bluetooth indicator starts flashing.
- Select "4sFoldable" from the list of available Bluetooth devices.
- Once the connection is established, the Bluetooth indicator turns off.

Switch Between Paired Devices

- Press **Fn + A**, **Fn + S** or **Fn + D** to switch between paired devices.
- The Bluetooth indicator lights up briefly.

2 Technische Daten


Modell: 541917 / 541918 / 541919 / 541920
Bluetooth-Version: 5.0
Frequenzbereich: 2402–2480 MHz
Maximale Sendeleistung: 3,22 dBm
Reichweite: bis zu 10 m
Anzahl koppelbarer Geräte: bis zu 3
Ladeanschluss: USB-C
Akku: Li-Polymer, 3,7V, 500 mAh
Betriebsspannung: 3,3–4,2 V

Ladezeit: 1–2 Stunden
Betriebszeit: bis zu 50 Stunden
Standby-Zeit: bis zu 2 Monate

Unterstützte Betriebssysteme:

- Android: ab Version 3.0
- iPadOS: ab Version 13.4
- Windows
- macOS
- iOS

3 Produktübersicht

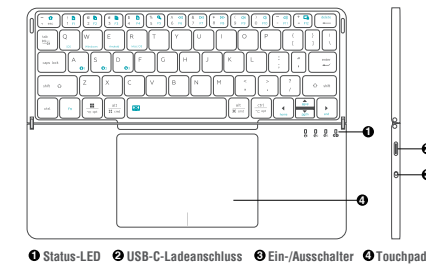

4 Erste Schritte

Tastatur vor der ersten Verwendung laden

- Verbinde die Tastatur mit dem mitgelieferten USB-C-Kabel mit einer geeigneten USB-Stromquelle.
- Lade den Akku vor der ersten Verwendung vollständig auf.

Tastatur einschalten

- Schiebe den Ein-/Ausschalter auf **ON**.
- Die Status-LED leuchtet kurz auf.

Bluetooth-Verbindung herstellen

- Aktiviere Bluetooth auf deinem Endgerät.
- Halte **Fn + A**, **Fn + S** oder **Fn + D** ca. 3 Sekunden gedrückt, bis die Bluetooth-Anzeige blinkt.
- Wähle "4sFoldable" in der Bluetooth-Geräteleiste aus.
- Nach erfolgreicher Verbindung erlischt die Bluetooth-Anzeige.

Zwischen gekoppelten Geräten wechseln

- Drücke **Fn + A**, **Fn + S** oder **Fn + D**, um zwischen den gekoppelten Geräten zu wechseln.
- Die Bluetooth-Anzeige leuchtet kurz auf.

5 Operating Instructions

Switch Operating System

The product automatically detects the operating system. Alternatively, the operating system can be selected manually:

- Fn + W = Windows**
- Fn + E = Android**
- Fn + Q = iOS / iPadOS**
- Fn + R = macOS**

Disconnect the Bluetooth Connection

Switch off the keyboard or remove the Bluetooth pairing in the Bluetooth settings of your device.

Touchpad Gestures and Functions

	Function	Windows	macOS	Android	iOS / iPadOS
	Move cursor	✓	✓	✓	✓
	Single click	✓	✓	✓	✓
	Double click	✓	✓	✓	-
	Scroll	✓	✓	✓	✓ (2 fingers)
	Right click	✓	✓	✓	-
	Pinch to Zoom	✓	✓	✓	✓
	Open search	✓	-	-	-
	Task View / Multitasking	✓	-	-	✓
	Show desktop	✓	-	-	-
	Switch between Virtual desktops	✓	-	-	-
	Drag&Drop	✓	-	-	-
	Mission Control	-	✓	-	-
	Launch pad	-	✓	-	-
	Home Screen	-	-	-	✓
	App Switcher	-	-	-	✓

For keys with multiple functions, press and hold **Fn**. The availability of individual functions depends on the operating system in use.

Lock the Touchpad

Press **Fn + Touchpad Key** to lock or unlock the touchpad.

5 Hinweise zur Funktion

Betriebssystem wechseln

Das Produkt erkennt das Betriebssystem automatisch. Alternativ kann die Umschaltung manuell erfolgen:

- Fn + W = Windows**
- Fn + E = Android**
- Fn + Q = iOS / iPadOS**
- Fn + R = macOS**

Bluetooth-Verbindung trennen

Schalte die Tastatur aus oder entferne die Bluetooth-Kopplung in den Bluetooth-Einstellungen des Endgeräts.

Touchpad-Gesten und Funktionen

	Funktion	Windows	macOS	Android	iOS / iPadOS
	Cursor bewegen	✓	✓	✓	✓
	Einfachklick	✓	✓	✓	✓
	Doppelklick	✓	✓	✓	-
	Scrollen	✓	✓	✓	✓ (2 fingers)
	Rechtsklick	✓	✓	✓	-
	Pinch to Zoom	✓	✓	✓	✓
	Suche öffnen	✓	-	-	-
	Task View / Multitasking	✓	-	-	✓
	Desktop anzeigen	✓	-	-	-
	Zwischen virtuellen Desktops wechseln	✓	-	-	-
	Drag&Drop	✓	-	-	-
	Mission Control	-	✓	-	-
	Launchpad	-	✓	-	-
	Home-Bildschirm	-	-	-	✓
	App Switcher	-	-	-	✓

Bei mehrfach belegten Tasten **Fn** gedrückt halten. Die Verfügbarkeit einzelner Funktionen ist abhängig vom verwendeten Betriebssystem.

Touchpad sperren

Drücke **Fn + Touchpad**, um das Touchpad zu sperren oder wieder zu aktivieren.

6 Care and Maintenance

- Protect the product from moisture, liquids and heavy soiling.
- Clean the product only with a soft, dry cloth.
- Do not use aggressive cleaning agents or solvents.
- Avoid excessive pressure, bending and impacts.
- Switch off the product when it is not used for an extended period and recharge the battery regularly.

7 Warranty

The statutory warranty provisions apply.
4smarts GmbH shall not be liable for damage resulting from improper installation, assembly or use of the product, or from failure to observe this user manual and/or the safety instructions, to the extent permitted by applicable law.

8 Environmental Information

Electrical and electronic equipment as well as batteries must not be disposed of with household waste. Users are legally required to return waste electrical and electronic equipment and batteries at the end of their service life to designated collection points or to the retailer.

9 Service and Support


If the product is defective or you experience any problems while using it, please contact your dealer or 4smarts Support: www.4smarts.com/contact

Service hotline
Monday – Friday: 9:00 a.m. – 5:00 p.m.
+49 (0)821 20708444
customer-service@4smarts.com

10 Declaration of Conformity

4smarts GmbH hereby declares that this product complies with the essential requirements and the other relevant provisions of Directive 2014/53/EU. The full EU Declaration of Conformity is available at: www.4smarts.com

4smarts UNIVERSAL WIRELESS KEYBOARD FOLDABLE

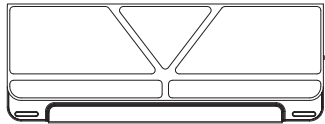

Thank You ♥
for choosing a quality product from 4smarts

4smarts

Thanks for buying our product! We at 4smarts are sure it will serve you well. Follow us on social media for news, customer support and to win great prizes. See you there!



@4smarts_official



facebook.com/4smarts



linkedin.com/company/4smarts



All listed brands are trademarks of the corresponding companies. Errors and omissions excepted, and subject to technical changes. Our general terms of delivery and payment are applied.