

4smarts

LOCATION FINDER SKYTAG CARD RECHARGE



Thank You 
for choosing a quality product from 4smarts

1 Safety Instructions

Please read this user manual and the safety instructions carefully before using the product for the first time. We accept no liability for damages caused by failure to observe these instructions and safety guidelines.

1.1 General Safety Instructions

- Avoid strong vibrations, shocks, or pressure; protect the device from sunlight and rain during transportation.
- The device should be stored in a clean, cool, and dry place. Avoid direct sunlight and contact with corrosive substances.
- Do not allow children or pets to bite the device or accessories, as this may cause damage or device malfunction.
- The device contains small parts. Keep it out of reach of young children to prevent accidental ingestion, which could lead to choking.
- Do not drop the product or expose it to heavy impacts to avoid damage that could result in device failure.

1.2 Precautions for Batteries

- Overheating of the battery may cause an explosion.
- If the battery leaks, avoid skin and eye contact with the leaking fluid. In case of direct contact, rinse immediately with clean water and seek medical attention at a hospital.
- If a battery shows discoloration, deformation, abnormal heating, or other irregularities during use or storage, discontinue use.
- Always dispose of the battery according to regional disposal regulations and do not discard it in household waste.

2 Technical Specifications

Charging Method: Wireless charging

Bluetooth Version: 5.3

Maximum Transmission Power: 4 dBm

Waterproof Rating: IP65

Frequency Range: 2400 MHz ~ 2483.5 MHz

Connection Range: Up to 50 m (in unobstructed conditions)

Battery: Lithium-polymer battery (100 mAh, rechargeable)

Standby Time: Up to 8 months

Volume: 80~100 dB

Compatibility: iPhones/iPads with iOS 14.5 or later (compatible with Apple Find My)

EN



1. Wireless Charging Area
2. LED Indicator
3. Function Button


3 Getting Started

The 4smarts SkyTag Card is an innovative wallet finder in a credit card format that protects you from losing your wallet or other valuables. For example, if you place the SkyTag Card in your wallet, you can always track its location.

Powering the Device On and Off


- **Power On:** Press the function button briefly. You will hear a tone indicating that the device is powered on and in pairing mode.
- **Power Off:** Hold the function button for three seconds. The device will beep twice, indicating it has been powered off.

Adding to the Find My App

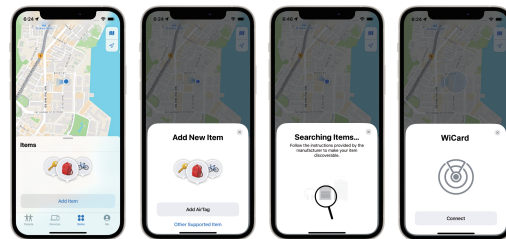


1. Open the Find My app on your compatible iPhone, iPad, iPod Touch, or Mac.
2. Select Items and tap Add New Item or the + symbol. Then, choose Other Supported Items.
3. Ensure the SkyTag Card is near your device. A message saying Searching for Items should appear.
4. Select the pop-up message WiCard and tap Connect.

EN

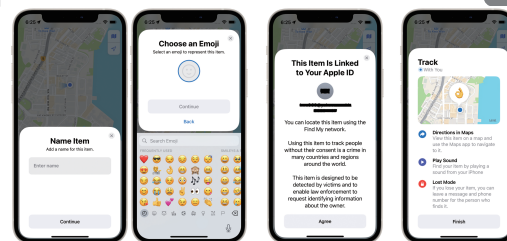

In the next step, assign a name and emoji to personalize your SkyTag Card, then tap Next.

4 Operating Instructions

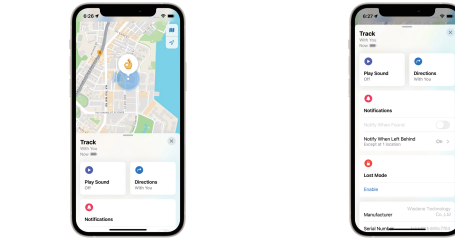


Functions of the SkyTag Card
Find Items: Once your SkyTag Card is paired, you can tap Play Sound in the Find My app to make it beep and locate its position.
Item Location: The last known location of the SkyTag Card is displayed as an emoji in the app. Tap Directions to navigate to that location.

Notifications

Enable Notify When Found: If the location of your Smart Finder is detected by another device with the Find My feature, you'll receive a notification with the updated location.
Enable Notify When Left Behind: You'll be notified if you leave your Smart Finder behind and it is no longer within range of your device.
Note: The Notify When Found feature can only be activated when your Smart Finder is out of range.


EN



Activating Lost Mode


1. Open the Find My app and select the SkyTag Card.
2. Tap Lost and follow the on-screen instructions.
3. Enter your phone number or email address and write a message that the finder can see.
4. Tap Activate to enable Lost Mode.

Note: When Lost Mode is activated, the Notify When Found feature is automatically enabled, and the SkyTag Card is locked.



Renaming the Device

- You can rename your Smart Finder in the app.
- **Removing the Device:** Ensure that Lost Mode is deactivated, then tap Remove Item. Confirm the action by tapping Remove again.
- Your Smart Finder will be reset and ready to pair with a new device.




Sharing This Item

1. Tap Add Person to share the item with someone else.
 2. Tap Next and select the people you want to share it with.
 3. Tap Share and wait for the recipients to confirm your invitation.
- Note:** Others may be able to locate this item. Notifications about unwanted tracking will be silenced.
Requires iOS 17 or later.

EN

Charging

This product can only be charged wirelessly. A charger is not included in the package. Ensure you use a compatible charger with a minimum output of 5 watts.



EN

5 Maintenance and Care

- Do not open the device, and have it repaired only by a professional.
- Avoid using harsh chemicals, cleaning agents, or similar substances for cleaning.
- Use a clean, dry cloth to wipe the device.

6 Warranty

4smarts GmbH accepts no liability or warranty for damages resulting from improper installation, assembly, or use of the product, or failure to observe the user manual and/or safety instructions.

7 Environmental Protection Information

Electrical and electronic devices, as well as batteries, must not be disposed of with household waste. Consumers are legally obligated to return electrical and electronic devices, as well as batteries, to designated public collection points or the point of sale at the end of their service life.

8 Service and Support

For defective products or issues during installation, please contact your retailer or the 4smarts Product Support team at: <http://www.4smarts.com/contact>.
Service Hotline: Monday–Friday, 9 AM–5 PM
Phone: +49(0)821 20708444
Email: customer-service@4smarts.com

9 Declaration of Conformity

Hereby, 4smarts GmbH declares that this product complies with the essential requirements and other relevant provisions of Directive 2014/53/EU. For further information and the full Declaration of Conformity under the RED Directive, please visit: www.4smarts.com.

To locate this item using the "Apple Find My" app, the latest version of iOS, iPadOS, or macOS is recommended. The "Find Items" app on Apple Watch requires the latest version of watchOS. The use of the "Works with Apple" badge indicates that a product has been designed specifically for use with the technology identified in the badge and has been certified by the product manufacturer to meet Apple Find My Network specifications and requirements. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.
Apple, Apple Find My, Apple Watch, Find My, iPhone, iPad, iPadOS, Mac, macOS, and watchOS are trademarks of Apple Inc. iOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.

1 Sicherheitshinweise

Bitte lies diese Bedienungsanleitung und die Sicherheitshinweise vor der ersten Inbetriebnahme sorgfältig durch. Für Schäden, die durch Nichtbeachtung dieser Anleitung und der Sicherheitshinweise entstehen, übernehmen wir keine Haftung.

1.1 Allgemeine Sicherheitshinweise

- Vermeide starke Vibrationen, Stöße oder Extrusion, schütze das Gerät vor Sonne und Regen während des Transports.
- Das Gerät sollte in einem sauberen, kühlen und trockenen Raum gelagert werden, direkte Sonneneinstrahlung und Kontakt mit ätzenden Substanzen vermeiden.
- Lass Kinder oder Haustiere nicht in das Gerät oder das Zubehör beißen, da dies zu Schäden oder einem Ausfall des Geräts führen kann.
- Das Gerät enthält Kleinteile. Bitte bringe das Gerät nicht in die Reichweite von Kleinkindern. Kinder können unbeabsichtigt Kleinteile verschlucken und daran ersticken.
- Lass das Produkt nicht fallen und setze es keinen starken Stößen aus, um es nicht zu beschädigen, was zu einem Ausfall des Geräts führen kann.

1.2 Vorsichtsmaßnahmen für Batterien

- Eine Überhitzung der Batterie kann eine Explosion verursachen.
- Falls die Batterie ausläuft, vermeide den Kontakt von Haut und Augen mit der auslaufenden Flüssigkeit. Bei direktem Kontakt spüle bitte sofort mit klarem Wasser und begib dich zur ärztlichen Behandlung in ein Krankenhaus.
- Wenn eine Batterie während des Gebrauchs oder der Aufbewahrung Verfärbungen, Verformungen, abnormale Erwärmung oder andere Anomalien aufweist, verwende sie bitte nicht mehr.
- Entsorge die Batterie stets nach den regionalen Entsorgungsvorschriften und wirf sie nicht in den Hausmüll.

2 Technische Daten

Kompatibilität: iPhones/iPads mit iOS 14.5 oder neuer (Apple Wo ist? kompatibel)

Ladeart: Kabelloses Laden

Bluetooth-Version: 5.3

Maximale Sendeleistung: 4 dBm

Wasserschutzklasse: IP65

Frequenzbereich: 2400 MHz – 2483,5 MHz

Verbindungsreichweite: Bis zu 50 m (bei ungehinderter Sicht)

Batterie: Lithium-Polymer-Batterie (100 mAh, wiederaufladbar)

Standby-Zeit: Bis zu 8 Monate

Lautstärke: 80–100 dB

DE



1. Funktionstaste
2. LED-Anzeige
3. Kabelloser Ladebereich


3 Erste Schritte

Der 4smarts SkyTag Card ist ein innovativer Geldbörsenfinder im Kreditkartenformat, der dich vor dem Verlust deiner Geldbörse oder anderer Gegenstände schützt. Wenn du den SkyTag Card zum Beispiel in deine Brieftasche steckst, kannst du jederzeit den Standort deiner Brieftasche sehen.


Gerät ein- und ausschalten

- **Einschalten:** Drücke die Funktionstaste einmal kurz, und du hörst einen Signalton, der anzeigt, dass das Gerät eingeschaltet ist und sich im Kopplungsmodus befindet.
- **Ausschalten:** Halte die Funktionstaste drei Sekunden lang gedrückt. Das Gerät sollte zweimal piepsen, was anzeigt, dass es ausgeschaltet ist.


Hinzufügen zur "Wo ist?" App




1. Öffne die „Wo ist?“-App auf deinem unterstützten iPhone, iPad, iPod Touch oder Mac.



2. Wähle „Objekte“ und tippe auf „Anderes Objekt hinzufügen“ oder direkt auf das „+“-Symbol. Wähle „Andere unterstützte Objekte“.




3. Stelle sicher, dass der SkyTag Card in der Nähe deines Geräts ist. Es sollte die Meldung „Suche nach Objekten“ erscheinen.




4. Wähle die Pop-up-Meldung „WiCard“ aus und tippe auf „Verbinden“.

DE



5. Gib im nächsten Schritt einen Namen und ein Emoji ein, um deinen SkyTag Card zu personalisieren, und tippe auf „Weiter“.





6. Wenn „Dieses Objekt ist mit deiner Apple-ID verknüpft“ erscheint, tippe auf „Zustimmen“.



7. Tippe auf „Fertig“, um die Einrichtung abzuschließen.

DE

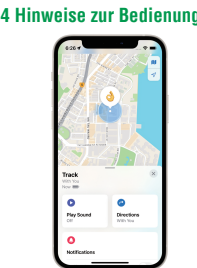

Hinweis: Die Funktion „Benachrichtigen, wenn gefunden“ kann nur aktiviert werden, wenn sich dein Smart Finder außerhalb der Reichweite befindet.

Funktionen des SkyTag Card

Objekte finden: Wenn dein SkyTag Card gekoppelt ist, kannst du in der „Wo ist?“-App auf „Ton abspielen“ tippen, um ihn piepsen zu lassen und seinen Standort zu finden.
Standort des Objekts: Der letzte bekannte Standort des SkyTag Card wird in der App als Emoji angezeigt. Tippe auf „Wegbeschreibung“, um dorthin zu navigieren.


Benachrichtigungen

Aktiviere die Option „Benachrichtigen, wenn gefunden“. Wenn der Standort deines Smart Finders von einem anderen Gerät mit „Wo ist?“-Funktion erkannt wird, erhältst du eine Benachrichtigung über den aktualisierten Standort.
• Aktiviere die Option „Benachrichtigen, wenn zurückgelassen“. Du wirst benachrichtigt, wenn du deinen Smart Finder zurücklässt und er nicht mehr in Reichweite deines Geräts ist.

DE

Aufladen

Dieses Produkt kann nur kabellos geladen werden. Ein Ladegerät ist nicht im Lieferumfang enthalten. Achte auf die Verwendung eines kompatiblen Ladegeräts mit mindestens 5 Watt.



DE

5 Wartung und Pflege

- Öffne das Gerät nicht und lass es nur von einem Fachmann reparieren.
- Verwende zur Reinigung keine scharfen Chemikalien, Reinigungsmittel oder Ähnliches.
- Verwende zum Abwischen ein sauberes, trockenes Stofftuch.

6 Gewährleistung

Die 4smarts GmbH übernimmt keinerlei Haftung oder Gewährleistung für Schäden, die aus unsachgemäßer Installation, Montage und unsachgemäßem Gebrauch des Produktes oder einer Nichtbeachtung der Bedienungsanleitung und/oder der Sicherheitshinweise resultieren.

7 Hinweise zum Umweltschutz



Elektrische und elektronische Geräte sowie Batterien dürfen nicht mit dem Hausmüll entsorgt werden. Der Verbraucher ist gesetzlich verpflichtet, elektrische und elektronische Geräte sowie Batterien am Ende ihrer Lebensdauer an die dafür eingerichteten, öffentlichen Sammelstellen oder an die Verkaufsstelle zurückzugeben.

8 Service und Support

Bei defekten Produkten oder Problemen während der Installation wende dich bitte an deinen Händler oder an die 4smarts Produktberatung auf: <http://www.4smarts.com/contact>.

Service Hotline: Montag–Freitag: 9–17h

Telefon: +49(0)821 20708444

E-Mail: customer-service@4smarts.com

9 Konformitätshinweis

Hiermit erklärt die 4smarts GmbH, dass sich dieses Produkt in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 2014/53/EU befindet. Weitere Informationen sowie die vollständige Konformitätserklärung nach der RED-Richtlinie findest du unter: www.4smarts.com.

*Um diesen Gegenstand mit der App "Apple Find My" zu finden, wird die neueste Version von iOS, iPadOS oder macOS empfohlen. Die App "Gegenstände suchen" auf der Apple Watch erfordert die neueste Version von watchOS.

Die Verwendung des Abzeichens "Works with Apple" bedeutet, dass ein Produkt speziell für die Verwendung mit der in dem Abzeichen angegebenen Technologie entwickelt wurde und vom Produkthersteller für die Erfüllung der Produktspezifikationen und Anforderungen von Apple Find My Network zertifiziert wurde. Apple ist nicht verantwortlich für den Betrieb dieses Geräts oder die Verwendung dieses Produkts oder dessen Übereinstimmung mit Sicherheits- und Regulierungsstandards. Apple, Apple Find My, Apple Watch, Find My, iPhone, iPad, iPadOS, Mac, macOS und watchOS sind Marken von Apple Inc. iOS ist eine Marke oder eingetragene Marke von Cisco in den USA und anderen Ländern und wird unter Lizenz verwendet.

4smarts

Thanks for buying our product! We at 4smarts are sure it will serve you well. Follow us on social media for news, customer support and to win great prizes. See you there!



@4smarts_official



facebook.com/4smarts



linkedin.com/company/4smarts



All listed brands are trademarks of the corresponding companies. Errors and omissions excepted, and subject to technical changes. Our general terms of delivery and payment are applied.