

4smarts

ACTIVE STYLUS PEN PENCIL PRO LUCID



1 Safety Instructions

Please read the complete instructions and all safety instructions carefully before using the appliance for the first time. We accept no liability for damage caused by failure to observe these instructions and the safety instructions.


1.1 General Precautions

- Do not drop the product and use it only in a dry, clean environment.
- Avoid moisture and dust as they may damage the product.
- The item is not a toy and must be kept out of the reach of children.

1.2 Precautions for Batteries

- The unit has a built-in lithium battery and should never be exposed to fire or improperly disposed of.
- Follow all charging instructions and charge the battery at least every 3 months.
- Protect the battery from overheating and do not overcharge it.
- Never expose it to high temperatures and avoid damage and shocks.

2 Product Description



- Press and hold for 3s to turn on/off
- Built in battery
- Charging by magnetic connection to iPad
- Indicator light
- Removable nib

3 Technical Details

Bluetooth: Version 5.1
Battery: Li-ion, 3.7V, 140mAh, 0.518Wh
Magnetic wireless charging
Charging time: 30 min
Working time: 8-10 hrs
Transmission power: 5W
Frequency range: 100kHz – 180kHz
Sleep: Auto-off in 10 min
Standby: 12 months
1.5 mm replaceable POM nib
Performance: No offset, no delay

Compatible iPads: from 2018, system version 12.2 or higher

Name / Size	Model
iPad mini 6/8.3-inch(2021)	A2567/A2568/A2569
iPad Pro 6/12.9-inch(2022)	A2436/A2437/A2764/A2766
iPad Pro 5/12.9-inch(2021)	A2378/A2461/A2379/A2462
iPad Pro 4/12.9-inch(2020)	A2229/A2233/A2069/A2232
iPad Pro 4/11-inch(2022)	A2759/A2435/A2761/A2762
iPad Pro 3/12.9-inch(2018)	A1876/A2014/A1895/A1983
iPad Pro 3/11-inch(2021)	A2377/A2459/A2301/A2460
iPad Pro 2/11-inch(2020)	A2228/A2213/A2068/A2230
iPad Pro 1/11-inch(2018)	A1980/A2013/A1934/A1979
iPad Air5/10.9-inch(2022)	A2588/A2589/A2591
iPad Air 4/10.9-inch(2020)	A2316/A2324/A2325/A2072


4 Getting Started

4.1 Powering On and Off

- To turn on the pen, press and hold the top button for 3 seconds until the indicator light turns on.
- Now you can tap, slide and do other operations on your iPad with the stylus instead of your fingers. You can also use the pen to write, draw, etc. in specific applications.
- To turn off the device, press and hold the top button again until the indicator light turns off. After 10 minutes of inactivity, the pen will automatically turn off to extend battery life.


4.2 Bluetooth

Ensure Bluetooth is enabled on the iPad. Turn on the stylus and open the Bluetooth settings on the device. Select "4smarts Pencil Pro Lucid" from the list of available devices to establish the connection.

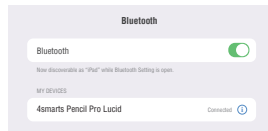

4.3 Real-time power display

After the stylus pen is connected to Bluetooth, the main interface slides left to the widget.



4.4 Shortcut functions top button

- Press once to return to HOME
- Press twice to MULTI-TASK
- Press three times to make a screen shot.

4.5 Magnetic adsorption charging

After connecting Bluetooth, it can be adsorbed on the iPad for wireless charging. When fully charged, the green light will go on for 30 seconds and then go off automatically, when the charging is completed.


5 Function Notes

5.1 Preparation

Before the first use of the pen, it is recommended to restart the iPad. Make sure the iPad's system version is 12.2 or higher and that the iPad is turned on and unlocked. If another pen (e.g., Apple Pencil) was previously connected to the iPad via Bluetooth, it should be disconnected before connecting the 4smarts Pencil Pro Lucid.

5.2 Charging indication

The battery status of the stylus can be checked directly in the iPad settings. You can also display the battery level in the Control Center. To do this, simply pull down the Control Center from the top right corner of the screen. The battery lasts approximately 8 to 10 hours when fully charged.

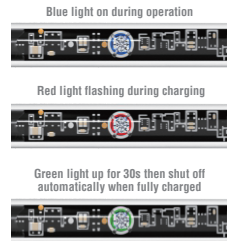

5.3 Disabling the "Only Draw with Apple Pencil" function:

- Go to Settings on the iPad.
- Select "Apple Pencil."
- Turn off the "Only Draw with Apple Pencil" option.
- Checking the Battery Status

5.4 Replacing the nib

Removing

Hold the stylus firmly and gently twist the tip counterclockwise until it loosens and can be removed.

Inserting

Place the new tip on the stylus and twist it clockwise until it is firmly in place.

6 Care and Maintenance

Use only dry cloths for cleaning. The product is not waterproof. Do not clean with water. Do not open the device and have it repaired only by a professional.

7 Warranty

4smarts GmbH assumes no liability or warranty for damages resulting from improper installation, assembly, improper use of the product, or non-compliance with the user manual and/or safety instructions.

8 Environmental Protection Notes

Electrical and electronic devices, as well as batteries, must not be disposed of with household waste. Consumers are legally obligated to return electrical and electronic devices, as well as batteries, at the end of their service life to the appropriate public collection points or to the point of sale.

9 Service and Support

If there are defective products or problems during installation, please contact your dealer or the 4smarts product support at: <http://www.4smarts.com/contact>.

Service Hotline

Monday - Friday: 9am – 5pm
 +49 (0)821 20708444
 E-mail: customer-service@4smarts.com

10 Declaration of Conformity

4smarts GmbH hereby declares that this device complies with the essential requirements and other relevant provisions of EU Directive 2014/53/EU. The Declaration of Conformity can be viewed on the website www.4smarts.com.

THANK YOU
for choosing a quality product from 4smarts

1 Sicherheitshinweise

Bitte lies diese Bedienungsanleitung und die Sicherheitshinweise vor der ersten Inbetriebnahme sorgfältig durch. Für Schäden, die durch Nichtbeachtung dieser Anleitung und der Sicherheitshinweise entstehen, übernehmen wir keine Haftung.


1.1 Allgemeine Sicherheitshinweise

- Lass das Gerät nicht fallen und verwende es nur in einer trockenen und sauberen Umgebung.
- Vermeide Feuchtigkeit und Staub, da sie das Gerät beschädigen können.
- Das Gerät ist kein Spielzeug und darf nicht in deine Hände gelangen.

1.2 Vorsichtsmaßnahmen für Akkus

- Das Gerät verfügt über eine eingebaute Lithium-Batterie, die niemals Feuer ausgesetzt oder unsachgemäß entsorgt werden darf.
- Befolge alle Ladeanweisungen und lade den Akku mindestens alle 3 Monate auf.
- Schütze die Batterie vor Überhitzung und überlade sie nicht.
- Setze sie keinen hohen Temperaturen aus und vermeide Beschädigungen und Stöße.

2 Produktbeschreibung



1. **Drücke und halte die Taste 3 Sekunden lang, um das Gerät ein- oder auszuschalten**
2. **Integrierter Akku**
3. **Aufladung durch magnetische Verbindung zum iPad**
4. **Anzeigeleuchte**
5. **Abnehmbare Spitze**

3 Technische Daten

Bluetooth: Version 5.1
Batterie: Li-Ion, 3.7V, 140mAh, 0.518Wh
Magnetische kabellose Aufladung
Ladezeit: 30 Minuten
Betriebszeit: 8-10 Stunden
Sendeleistung: 5W
Frequenzbereich: 100KHz – 180KHz
Schlafmodus: Automatische Abschaltung nach 10 Minuten
Standby: 12 Monate
1,5 mm austauschbare POM-Spitze
Leistung: Kein Versatz, keine Verzögerung

Kompatible iPads: Ab 2018, Systemversion 12.2 oder höher

Name / Size	Model
iPad mini 6/8 3.-inch(2021)	A2567/A2568/A2569
iPad Pro 6/12.9.-inch(2022)	A2436/A2437/A2764/A2766
iPad Pro 5/12.9.-inch(2021)	A2378/A2461/A2379/A2462
iPad Pro 4/12.9.-inch(2020)	A2229/A2233/A2069/A2232
iPad Pro 4/11.-inch(2022)	A2759/A2435/A2761/A2762
iPad Pro 3/12.9.-inch(2018)	A1876/A2014/A1895/A1983
iPad Pro 3/11.-inch(2021)	A2377/A2459/A2301/A2460
iPad Pro 2/11.-inch(2020)	A2228/A2231/A2068/A2230
iPad Pro 1/11.-inch(2018)	A1980/A2013/A1934/A1979
iPad Air5/10.9.-inch(2022)	A2588/A2589/A2591
iPad Air 4/10.9.-inch(2020)	A2316/A2324/A2325/A2072


4 Erste Schritte

4.1 Ein- und Ausschalten

1. Um den Stift einzuschalten, drücke und halte die obere Taste 3 Sekunden lang, bis die Anzeigeleuchte aufleuchtet.
2. Nun kannst du tippen, wischen und andere Operationen auf deinem iPad mit dem Stift statt mit den Fingern ausführen. Du kannst den Stift auch zum Schreiben, Zeichnen usw. in spezifischen Anwendungen verwenden.
3. Um das Gerät auszuschalten, drücke und halte erneut die obere Taste, bis die Anzeigeleuchte erlischt. Nach 10 Minuten Inaktivität schaltet sich der Stift automatisch aus, um die Batterielebensdauer zu verlängern.


4.2 Bluetooth

Stelle sicher, dass Bluetooth auf deinem iPad aktiviert ist. Schalte den Stift ein und öffne die Bluetooth-Einstellungen auf dem Gerät. Wähle "4smarts Pencil Pro Lucid" aus der Liste der verfügbaren Geräte aus, um die Verbindung herzustellen.

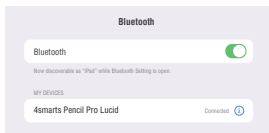

4.3 Echtzeit-Batteriestatusanzeige

Nachdem der Stift mit Bluetooth verbunden ist, schiebe die Hauptschnittstelle nach links zum Widget.



4.4 Kurzbefehle über die obere Taste

- Einmal drücken, um zum Startbildschirm zurückzukehren.
- Zweimal drücken, um Multitasking zu aktivieren.
- Dreimal drücken, um einen Screenshot zu machen.

4.5 Magnetisches kabelloses Laden

Nach dem Verbinden über Bluetooth kann der Stift zur kabellosen Aufladung am iPad angebracht werden. Wenn der Ladevorgang abgeschlossen ist, leuchtet die grüne Anzeigeleuchte 30 Sekunden lang auf und erlischt dann automatisch.

5 Funktionshinweise

5.1 Vorbereitung

Vor der ersten Verwendung des Stifts wird empfohlen, das iPad neu zu starten. Stelle sicher, dass die Systemversion deines iPads 12.2 oder höher ist und dass das iPad eingeschaltet und entsperrt ist. Wenn zuvor ein anderer Stift (z.B. Apple Pencil) über Bluetooth mit dem iPad verbunden war, sollte dieser vor dem Verbinden des 4smarts Pencil Pro Lucid getrennt werden.

5.2 Ladeanzeige

Der Batteriestatus des Stifts kann direkt in den iPad-Einstellungen überprüft werden. Du kannst den Batteriestand auch im Kontrollzentrum anzeigen. Ziehe dazu einfach das Kontrollzentrum von der oberen rechten Ecke des Bildschirms herunter. Der Akku hält bei voller Aufladung etwa 8 bis 10 Stunden.

BLAU - in Betrieb



RÖT - blinkt während des Ladevorgangs



GRÜN - leuchtet für 30 Sekunden auf und erlischt dann automatisch, sobald der Ladevorgang abgeschlossen ist



5.3 Deaktivierung der Funktion "Nur mit Apple Pencil zeichnen"

1. Gehe zu den Einstellungen auf deinem iPad.
2. Wähle "Apple Pencil".
3. Deaktiviere die Option "Nur mit Apple Pencil zeichnen".

5.4 Austausch der Spitze

Entfernen:

Halte den Stift fest und drehe die Spitze vorsichtig gegen den Uhrzeigersinn, bis sie sich löst und entfernt werden kann.

Einsetzen:

Setze die neue Spitze auf den Stift und drehe sie im Uhrzeigersinn, bis sie fest sitzt.

6 Wartung und Pflege

Verwende zur Reinigung nur trockene Tücher. Das Produkt ist nicht wasserdicht. Nicht mit Wasser reinigen. Öffne das Gerät nicht und lass es nur von einem Fachmann reparieren.

7 Gewährleistung

4smarts GmbH übernimmt keinerlei Haftung oder Gewährleistung für Schäden, die aus unsachgemäßem Gebrauch, Installation, Montage und unsachgemäßem Gebrauch des Produktes oder einer Nichtbeachtung der Bedienungsanleitung und/oder der Sicherheitshinweise resultieren.

8 Hinweise zum Umweltschutz



Elektrische und elektronische Geräte sowie Batterien dürfen nicht mit dem Hausmüll entsorgt werden. Der Verbraucher ist gesetzlich verpflichtet, elektrische und elektronische Geräte sowie Batterien am Ende ihrer Lebensdauer an den dafür eingerichteten, öffentlichen Sammelstellen oder an die Verkaufsstelle zurückzugeben.

9 Service und Support

Bei defekten Produkten oder Problemen während der Installation wende dich bitte an deinen Händler oder an die 4smarts Produktberatung auf: <http://www.4smarts.com/contact>.

Service Hotline

Montag – Freitag: 9-17 Uhr
+49 (0) 0821 20708444

E-mail: customer-service@4smarts.com

10 Konformitätshinweis

Hiermit erklärt die 4smarts GmbH, dass sich dieses Produkt in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 2015/35/EU befindet. Die Konformitätserklärung nach der RED Richtlinie findest du unter www.4smarts.com.

4smarts

Thanks for buying our product!

We at 4smarts are sure it will serve you well. Follow us on social media for news, customer support and to win great prizes. See you there!



@4smarts_official

facebook.com/4smarts

@4smarts_germany



All listed brands are trademarks of the corresponding companies. Errors and omissions excepted, and subject to technical changes. Our general terms of delivery and payment are applied.