




1. Clean the screen with cleaning kits



2. Align the applicator with your phone, making sure the pull tab is at the bottom

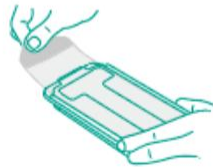

3. Slowly pull out the film completely, release the screen protector onto our phone



4. Swipe the finger for auto-absorption



5. Carefully remove the applicator



6. For remaing bubble, lift up the glass gently to the bubble position and use cloth to push out any air bubbles



7. Your screen is protected.

Your screen protector is ready.